

# DigiTel Standard Touch-tone Function Definition

	<b>1</b> PAUSE	<b>2</b> RECORD	<b>3</b> PLAY	
<b>44</b> JUMP TO BEGINNING	<b>4</b> REWIND	<b>5</b> VOLUME UP	<b>6</b> F.FORWARD	<b>66</b> JUMP TO END POINT
	<b>7</b>	<b>8</b> VOLUME DOWN	<b>9</b> PRIORITY	
	<b>*</b> HANGUP	<b>0</b> HELP	<b>#</b> SEND	