

Record Panel

Channel Recording Levels
Red when recording, grey when not recording

Start Record Button
Touch to start recording.

Stop Record Button
Touch for 3 seconds to stop recording.

Record Panel Icon
Includes a Record Status LED that shows when recording is in progress.



Record Time Display

Confidence Monitor Volume
Touch and drag to the required volume.

Message Area
Displays messages as required.


Mode Dial - Rotate dial to **Record Panel** icon or touch the **Record Panel** icon.

Archive Panel

Showing Archive to Optical
For details on archiving to network see the user's guide.

Start Archiving
Insert a blank disc and touch to start the creation of an archive CD/DVD.

Archive Panel Icon
Includes an Archive Status LED which is yellow when recordings are yet to be archived.

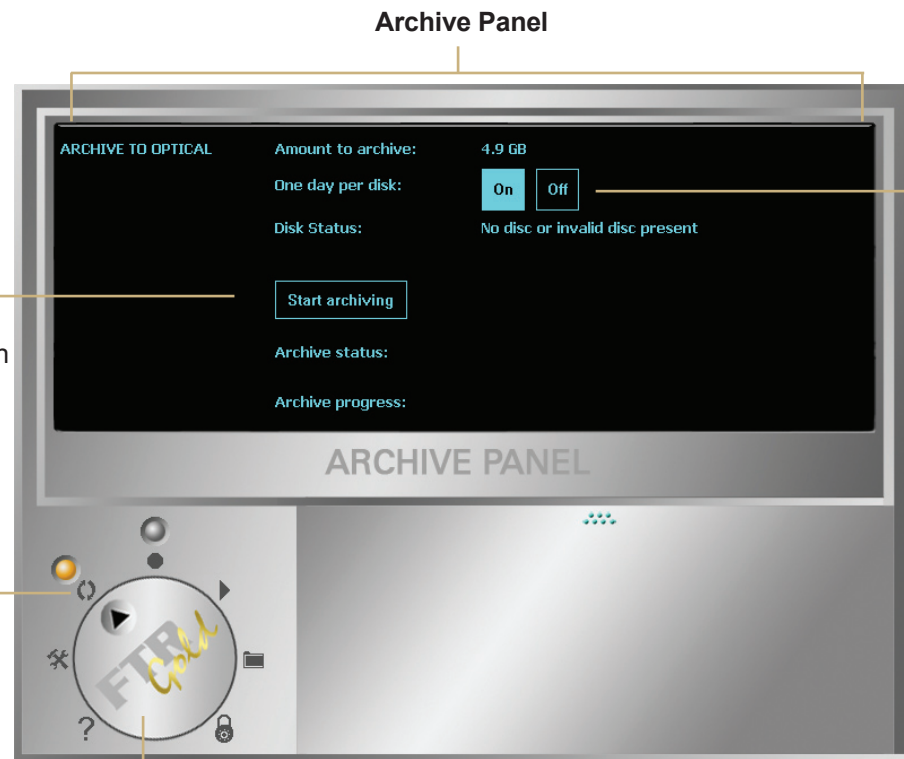



One day per disc
Touch **On** if you want each disc to be limited to a day of recording.

It is best practice to archive all recordings before shutting down the FTR Touch unit.

Monitor the Archive Status LED for confirmation that all recordings are archived.

Mode Dial - Rotate dial to **Archive Panel** icon or touch the **Archive Panel** icon.

File Panel

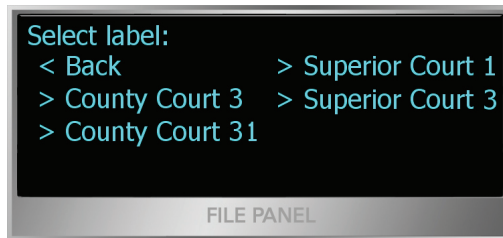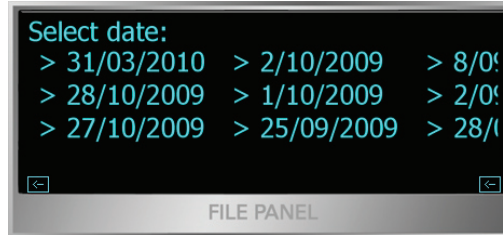

Use the **File Panel** to find a recording for playback.

Do the following:

1. Touch to select a device
2. Touch to select a date
3. Touch to select a label

Touch **Back** to return to the previous pane and touch the scroll buttons to show more options on each pane.


Mode Dial - Rotate dial to **File Panel** icon or touch the **File Panel** icon.

Playback Panel

Find and open recordings from the **File Panel** first.

Once opened in the playback panel you can:

- Touch **Start/Stop** to control playback.
- Touch **Scan back** or **Scan forward** to skip in 5 second intervals and play a half second.
- Adjust the play time using the **Current Play Time** display and adjustment buttons or by dragging the current play time control on the **Day Bar**. See the *User's Guide*.
- Adjust **Channel volumes** by touching and dragging the required channel volume control.
- Adjust the **Master volume** by touching and dragging the master volume control.

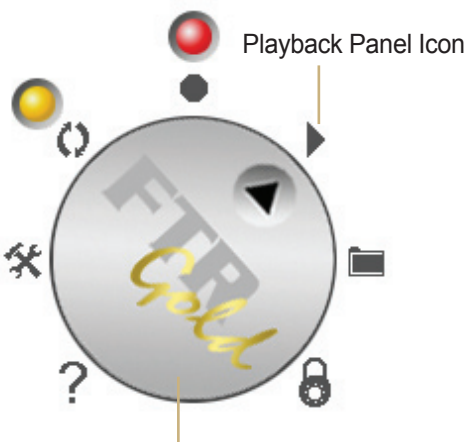

Mode Dial - Rotate dial to **Playback Panel** icon or touch the **Playback Panel** icon.